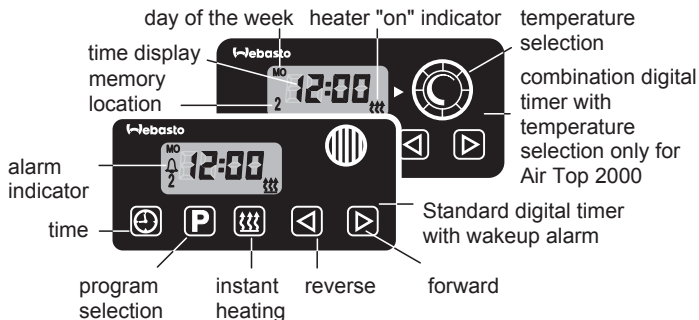


Operating Instructions

Standard Timer / Combination Timer



General

The standard digital timer/combination timer enables you to preset the start of the heater operation up to 7 days in advance. It is possible to program 3 different starting times, only one of which can be activated.

The standard digital timer features a wakeup alarm function. The combination timer has a temperature controller. The combination timer can only be used on Air Top 2000 heaters which allow the temperature to be preselected.

When the ignition switched on, the timer displays the current time and the day of the week. When the heater is switched on, the display and the buttons are illuminated.

After the power supply has been connected, all symbols on the display will flash. The current time and weekday must be set. No display occurs in TRS vehicles.




 





 
 
 
 


 
 
 
 
 

 



Operation

The timer can be operated in that all flashing symbols can be adjusted by means of the ◀ and ▶ buttons. If the buttons are not pressed within 5 seconds, the time displayed will be stored. If the ◀ and ▶ buttons are pressed for more than 2 seconds, the fast time-setting mode is activated.

If the ignition is switched off while the heater is operating in the continuous mode, the remaining operating time of 15 minutes is displayed and the heater continues to operate for this period of time.

Air Top 2000 Thermo 90

On heaters equipped with a fault diagnosis system (Air Top 2000 and Thermo 90), a number, i.e. the error code, may be flashing on the display. In this case, please consult your Webasto dealer.

Switching the heater on	Manually: by pressing the button  (instant heating) Automatically: by programming the heater starting time
Switching the heater off	Manually: by pressing the button  Automatically: after the programmed operating time has elapsed With the heater running: by programming the remaining operating time
Setting time/day of the week	Press the  button for more than 2 seconds - time of the day is flashing - and set the clock using the  and  buttons. Day of the week is flashing - adjust the day of the week.
Viewing the time	With the ignition switched off: press the 
Programming heater starting time	Press the  button - the memory location is flashing - using the  and  buttons set start of the heater operating time. Day of the week is flashing - set the day of the week. By repeatedly pressing the  button, memory locations 2 and 3 can be programmed or the time display mode can be reached.
Recalling/erasing preset times	Repeatedly press the  button until the desired memory location is displayed. To erase the preset time, press the  button several times until the time of the day is displayed instead of the memory
Programming duration of operating time	The heater must be switched off. Press the  button for 3 seconds - operating time is flashing - and set the desired operating time (10 to 120 minutes) using the  and  buttons.
Setting the remaining operating time	Set the desired remaining operating time (1 to 120 minutes) using the  and  buttons. The remaining operating time refers to the time the heater still continues to remain in operation. It can only be changed while the heater is in operation and the ignition switched off.
Setting the wakeup time	A wakeup time can only be programmed on the standard digital timer. The wakeup time is not bound to a specific day of the week. Repeatedly press the  button until the bell symbol  appears on the display. Set the desired wakeup time using the  and  buttons. The alarm clock turns off after 5 minutes or when one of the buttons is pressed.
Recalling/erasing the wakeup time	Repeatedly press the  button until the bell symbol  appears on the display - read off wakeup time. To erase the wakeup time: press the  button until the bell symbol  is no longer visible on the display.
Remote control	Possible by means of an optional external "instant heating" button
Vehicles with TRS equipment	On TRS vehicles it is not possible to program a preset starting time. The remaining time is shown on the display while the heater is in operation. The clock can be set. The alarm clock function can be programmed on the standard digital timer.