


Operating instructions

Control element

Rotary switch

1 Overview of control element

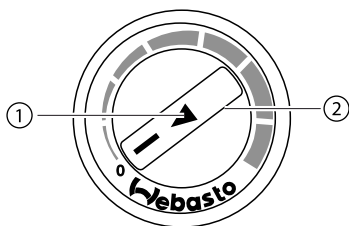

- 1 Operation indicator/fault code indicator/service indicator
- 2 Rotary knob (temperature)

2 About this document

2.1 Purpose of the document

These operating instructions are part of the product and provides the user with information on the safe operation of the unit.

2.2 Using this document

- ▶ Before operating the heater, carefully read these operating instructions as well as the operating instructions for the heater.
- ▶ Keep these operating instructions in the vehicle.
- ▶ Hand these operating instructions on to the following owner or user of the unit.

2.3 Use of symbols and highlighting



WARNING

Type and source of the risk

Result: non-observance can lead to severe or mortal injuries.

- ▶ Actions to protect yourself against risks.



CAUTION

Type and source of the risk

Result: non-observance leads to minor injuries.

- ▶ Actions to protect yourself against risks.



ATTENTION

Type and source of the property damage

Result: non-observance leads to property damage.

- ▶ Actions in order to avoid property damage.

Highlight	Explanation
✓	Requirements for the following necessary action
▶	Necessary action
Control	Name of controls

2.4 Warranty and liability

Webasto shall not assume liability for defects or damage that are the result that the installation and operating instructions as well as the instructions contained therein being disregarded.

This liability exclusion particularly applies for:

- improper use
- repairs not carried out by a Webasto service workshop
- use of non-genuine parts
- conversion of the unit without permission from Webasto

3 Safety

3.1 Intended use

The built-in control element is used to control the heater.

3.2 Regulations and legal requirements

- ▶ Regulations on the supplementary sheet "Important Information on Operating and Installation Instructions" must be observed.

3.3 Safety information

Risk of explosion in environments with combustible vapours, flammable dust and hazardous goods (e.g., petrol stations, tank facilities, fuel store, coal bunkers, timber yard or grain warehouses)

- ▶ Do not switch on or operate the heater.

Risk of poisoning and suffocation from exhaust fumes in closed rooms

- ▶ Do not switch on or operate the heater.

Risk of fire from flammable materials or liquids in the hot air flow

- ▶ Keep the hot air flow free.

Risk of injury from the defective unit

- ▶ Do not operate a defective heater.
- ▶ Contact a Webasto service workshop.

4 Operation



WARNING

Risk of explosion in environments with combustible vapours, flammable dust and hazardous goods (e.g. petrol stations, tank facilities, fuel store, coal bunkers, timber yard or grain warehouses)

Severe burns

- ▶ Do not switch on or operate the heater.



WARNING

Breathing exhaust fumes in closed rooms

Poisoning and suffocation

- ▶ Never operate the heater (also not with programmed heating start) in closed rooms such as garages or workshops that do not have an exhaust extraction unit.
- ▶ In workshops with exhaust extraction facilities, make sure that the exhaust extractor is fully operational.

4.1 Switch on the heater



- ▶ Turn rotary knob clockwise.
Operation indicator lights green.

4.2 Switch off the heater



- ▶ Turn rotary knob anticlockwise as far as it will go.
Operation indicator goes out.

4.3 To set heating temperature

The heating temperature can be set infinitely from 5 °C to 35 °C.

To increase heating temperature



- ▶ Turn rotary knob clockwise.

To decrease heating temperature



- ▶ Turn rotary knob anticlockwise.

5 Cleaning

- ▶ Wipe control element with damp cloth.

6 Troubleshooting

The heater will output a fault code on the control element if a fault occurs during heating mode.

You will find further information in the operating instructions.

7 Disposal

The control element must not be disposed of in domestic waste.

- ▶ Observe the regional regulations for disposal of electronic products.

8 Service and customer services

Do you have any technical queries or a problem with your unit?

Country-specific telephone numbers for our branches can be found on the Webasto service point flyer or under www.webasto.com.

9 Technical data

Operating voltage range: 12 V to 24 V

Permissible ambient temperature:

- Operation: -40 °C to +75 °C
- Storage: -40 °C to +85 °C

In multilingual versions the German language is binding.

The telephone number of each country can be found in the Webasto service center leaflet or the website of the respective Webasto representative of your country.

Webasto Thermo & Comfort SE
Postfach 1410
82199 Gilching
Germany

Visiting Address:
Friedrichshafener Str. 9
82205 Gilching
Germany



www.webasto.com

