

**7-Tage-Vorwahluhr  
7 days digital timer  
Montre de pré-sél. de 7 jours  
Timer digitale 7 giorni  
Reloj de preselecc. semanal  
7-dagars-digitalur**

**Betriebsanleitung  
Operating Instructions  
Instructions d'utilisation  
Istruzioni d'impiego  
Instrucciones de manejo  
Bruksanvisning**

## Description

The digital timer with pre-selection of days is used for switching on and off the heater. The timer shows the following functions:

- Indication of time.
- Indication of days.
- Pre-selection of 3 different periods; each period can be programmed with day and time in advance.
- Indication of temperature (if desired).

Display and button lights are integrated in the digital timer.

## Technical Data

Voltage range:

at 12 volts: 9 ... 15 volts,

at 24 volts: 19 ... 30 volts.

Operating temperature range:


– 40 °C ... + 75 °C.

Current consumption, indicator light is switched off: less than 1.0 mA.

## Operation with pre-selection

Programming heater's starting time:

The heater can be exactly programmed to come on at any time between

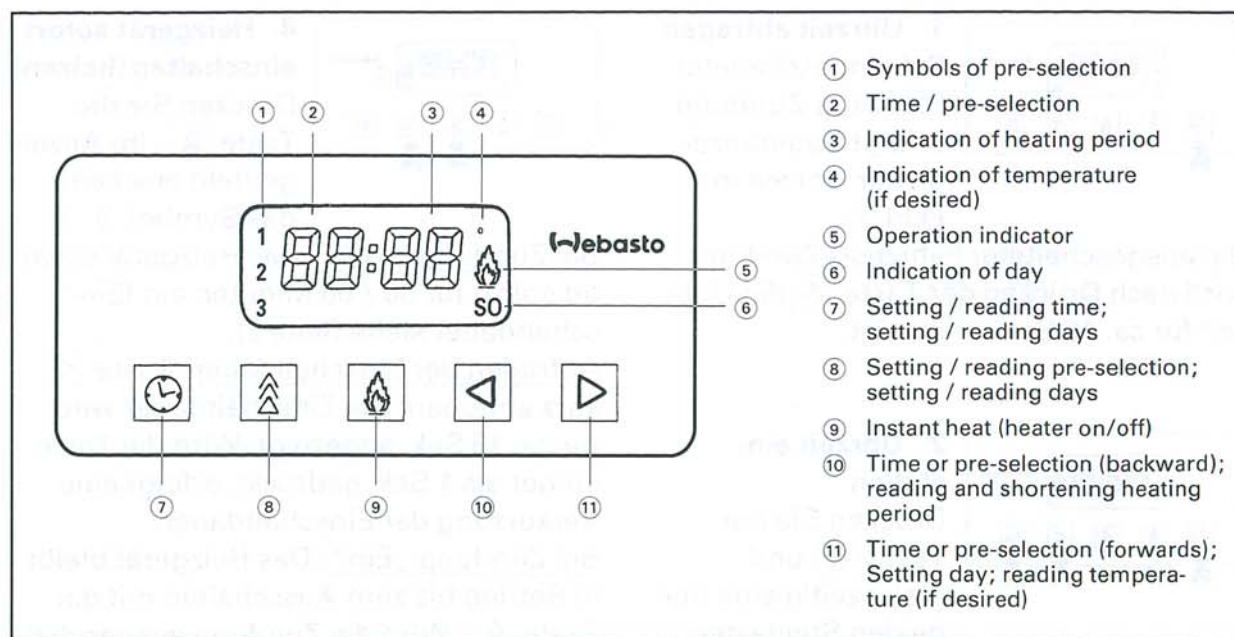

»1 minute« and »7 days« from the time of selection.

## Heating period

Ignition "On" – switching on with button »Instant heat«:

The heating period is unlimited. The heater works up to the switching off by hand.

Ignition "On" – switching on with »pre-selection«:

The heater runs 30 / 60 minutes if pre-selection is chosen.


If the ignition is switched off, the heater runs still 5 minutes and thereafter it is switched off.

Ignition "Off" – the heater is 30 / 60 minutes in operation.

The heating period is dependent upon the used digital timer:

- ☐ **Heating period 30 minutes**
- ☐ **Heating period 60 minutes**




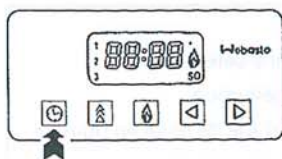

## 1. Reading the time

If vehicle's ignition is switched on, the time is permanently indicated in the display ②.


If vehicle's ignition is switched off, the time is indicated for approx. 15 seconds after pressing the button .

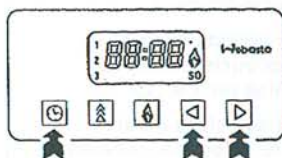

## 2. Setting the time

Press button and at the same time press either button (backwards) or (forwards).


After approx. 2 seconds it is switched over to quick change. The last few minutes are set accurately by quick pushes.

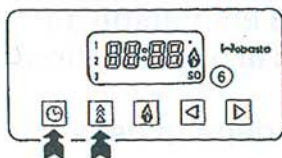

## 3. Setting the days

Press button . The display shows the day of week ⑥. Additionally press the button for setting the next day. The last indicated day is programmed.

The last indicated day is programmed.

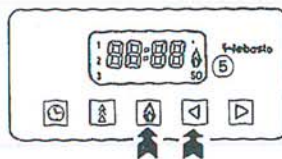

## 4. Instant heating (immediate switching on)


Press button . The display shows the symbol ⑤.

Vehicle's ignition "Off": The heater is switched on immediately to 30 or 60 minutes (see page 4 for heating period).

Reading the heating period: Press button . The heating time is indicated for approx. 15 seconds. If the button is pressed longer than 1 second, the heating period is shortened!

Vehicle's ignition "On": The heater works up to the switching off by button . If the ignition is switched off, the heater runs still 5 minutes and thereafter it is switched off.

Switching off the heater (before the heating period is finished): Press button again.

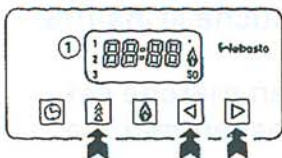

## 5. Switching on the heater with pre-selection program

Press button . The display ① shows the numbers


1, 2 or 3, the symbols for a pre-selection program (1, 2, 3). Now you can choose between 3 different pre-selection periods for switching on the heater.

**Pre-selection program 1:** Press the button . The symbol 1 is indicated.

1. Set the pre-selection time: Press one of the two buttons (backwards) or (forwards). After approx. 2 seconds it is switched over to quick change. The last few minutes are set accurately by quick pushes.

2. Set the pre-selection day: Choose the symbol 1 ① by button . After approx. 5 seconds the indication of week-day signals ⑥. Press button for setting the desired day of the week. If within 6 seconds the timer is not more activated, the pre-selection time and day are programmed. Now the heater will be switched on automatically at the programmed time.

**Pre-selection program 2 and 3:** Make the same procedure such as "pre-selection program 1", but take the symbols 2 and 3.

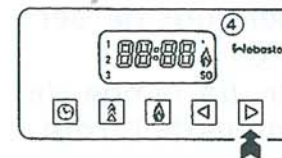

## 6. Temperature indicator (if installed)

Press button . The temperature is indicated in the time

display ④. The indication remains not later than an other function is chosen.



770767.07705

**Webasto AG**

Postfach 80  
D-82131 Stockdorf

Hotline (0 18 05) 93 22 78  
Hotfax (03 95) 55 92-353  
<http://www.webasto.de>

Anderungen vorbehalten  
Subject to modification  
Sous réserve de modifications  
Con riserva di apportare modifiche  
Reservados los derechos a introducir modificaciones  
Ändringar förbehålles